



Attention  
Risk of Danger,  
Warning



High Voltage,  
Risk of  
Electric Shock



Double / Reinforced  
Insulation



NOT  
Litter



CE Mark

## TECHNICAL SPECIFICATION



- **Dimensions** : 35x77mm
- **Panel Cut-out** : 29x71mm
- **Display** : 3 Digits 7 Segment
- **Sensor Type** : Custom Sensor (GM-HT-01)
- **Measuring Scale** : -19,9..+80,0 °C, 5 .. 95%RH
- **Resolution** : ± 0,1 °C, ± 1%RH
- **Accuracy** : ± % 1 (°C), ± % 3 (%RH); (Over full scale)



- **Control Form** : ON-OFF
- **Heating / Cooling** : Ht (heating), CL (cooling); selectable
- **Humidity Function** : lo (decrease humidity), hi (increase humidity); selectable
- **°C Output** : Relay (NO + NC), 250VAC, 2A, Resistive load
- **%RH Output** : Relay (NO), 250VAC, 2A, Resistive load
- **Supply Voltage** : 100..240VAC, 50-60Hz or 24VDC/AC.



- **Power Consumption** : < 6VA
- **Humidity** : 80% up to 30°C, then linearly decreases to 50% at 50°C (non-condensing)
- **Altitude** : < 2000 m




- **EMC** : EN 61000-6-1, EN 61000-6-3 (Only light industrial environment)
- **Safety** : EN 61010-1; Pollution degree 1, measurement category I, (Only light industrial environment, double/reinforced isolated, non-conductive pollution environment)



- **Protection Class** : IP20; according to EN 60529
- **Operation Temp.** : 0 .. 50 °C
- **Storage Temperature** : -10°C .. 60°C (no icing)
- **Weight** : < 0.5 kg
- **Keys** : Micro switch
- **Torque for screwing** : Max. 0.5 N.m

### Error Message:

- "Err" : In case of measurement failure, "Err" message displayed and Relay outputs become OFF

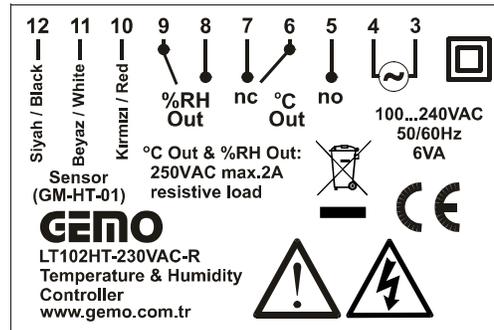

**WARNING:** Connect Humidity/Temperature sensor while power is off. Pay attention to the cable color codes printed on the device label. Wrong connection may result permanent device/sensor failure.

no: normally open nc: normally closed

## INSTALLATION, USE and WARNINGS



- This device and its packing is NOT litter and may NOT be disposed of with domestic waste. Please return this device and its packing to an appropriate recycling point at the end of its service life.
- Please read this user manual carefully and completely before installation and use. Please take into consideration all warnings mentioned in this manual.



- LT102HT is suitable only for permanent panel type mounting
- Installation and use of this device must be done by qualified, authorized and trained technical personnel only.
- Inspect device carefully before installation. Do not install and use broken and defective devices.
- Do not disassemble device. Do not make any repair on any part of the device. There is no accessible part inside the device. Please contact to manufacturer for broken and defective devices.



- Do not use device in environments subject to flammable, explosive and corrosive gases and/or substances.
- This device is designed for applications only in light industrial environments. This device is not suitable for medical and residential use. This device is not suitable for use related with human health and safety. This device is not suitable for automotive, military and marine use.
- Do not allow children and unauthorized people to use this device.



- Before installation and any technical work, disconnect the power supply and mains connections.
- Check the power supply voltage level before power on, and make sure voltage level is in specified limits. Check quality of neutral line. Improper neutral line may give permanent damage to the device.
- Connect an external power switch and an external fuse (1A, 250VAC) to the power supply line that are easily accessible for rapid intervention. Connect an external fuse (2A, 250VAC) for each relay output separately.
- Use appropriate cables for power supply and mains connections. Apply safety regulations during installation.
- Install the device in a well ventilated place. Install the device permanently into a proper panel cut-out. Fix the device with two fasteners supplied with the device. Only front panel must be accessible after installation is completed.



- Do not operate the device other then the environmental conditions given in Technical Specification.
- Do not operate the device in environments that may cause conductive pollution.
- Take precautions against negative environmental conditions like humidity, vibration, pollution and high/low temperature during installation.
- Connect Humidity/Temperature sensor while power is off. Pay attention to the cable color codes printed on the device label. Wrong connection may result permanent device/sensor failure.
- Keep device, signal cables and communication cables away from circuit breakers, power cables and devices/cables emitting electrical noise. Use shielded and twisted signal and communication cables and connect shield to earth ground on device side. Keep length of signal and communication cables less than 3m.
- In your applications, always use separate and independent mechanical and/or electromechanical devices/apparatus to support LT102HT to handle emergency cases..




- Use insulated cable end-sleeves at the end of cables screwed to the device connector terminals.
- Maximum torque for screwing; 0.5 N.m.
- Please check [www.gemo.com.tr](http://www.gemo.com.tr) for latest device and documentation updates regularly. All updates and all information are subject to change without notice.


## GENERAL SPECIFICATION

- This device is designed for basic temperature/humidity control applications only in light industrial environments.
- $\mu$ P based, temperature and humidity controller
- Measuring scale:  $-19.9^{\circ}\text{C} \dots +80.0^{\circ}\text{C}$ , 5 .. 95 %RH
- ON-OFF control form
- Separate outputs for temperature and humidity control
- Selectable heating and cooling function
- Selectable humidity increase / decrease function
- Upper limit for Temperature and Humidity SET settings
- Lower limit for Temperature and Humidity SET settings
- Adjustable separate hysteresis for Temperature and Humidity settings
- Adjustable delay timer before OUT ON for cooling function
- Separate adjustable "Offset" for Temperature and Humidity measurements
- Selectable parameter display feature
- Password protection
- High accuracy
- EEPROM memory to store settings
- Easy connection with plug-in connectors

**PROGRAMMING HEAT SET AND HUMIDITY SET**

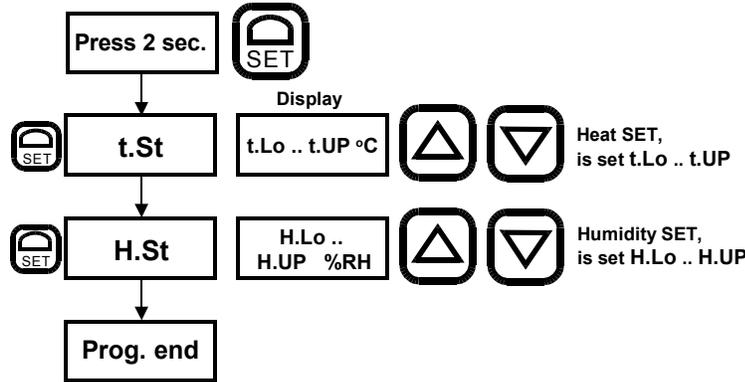

**PROGRAMMING OTHER PARAMETERS**

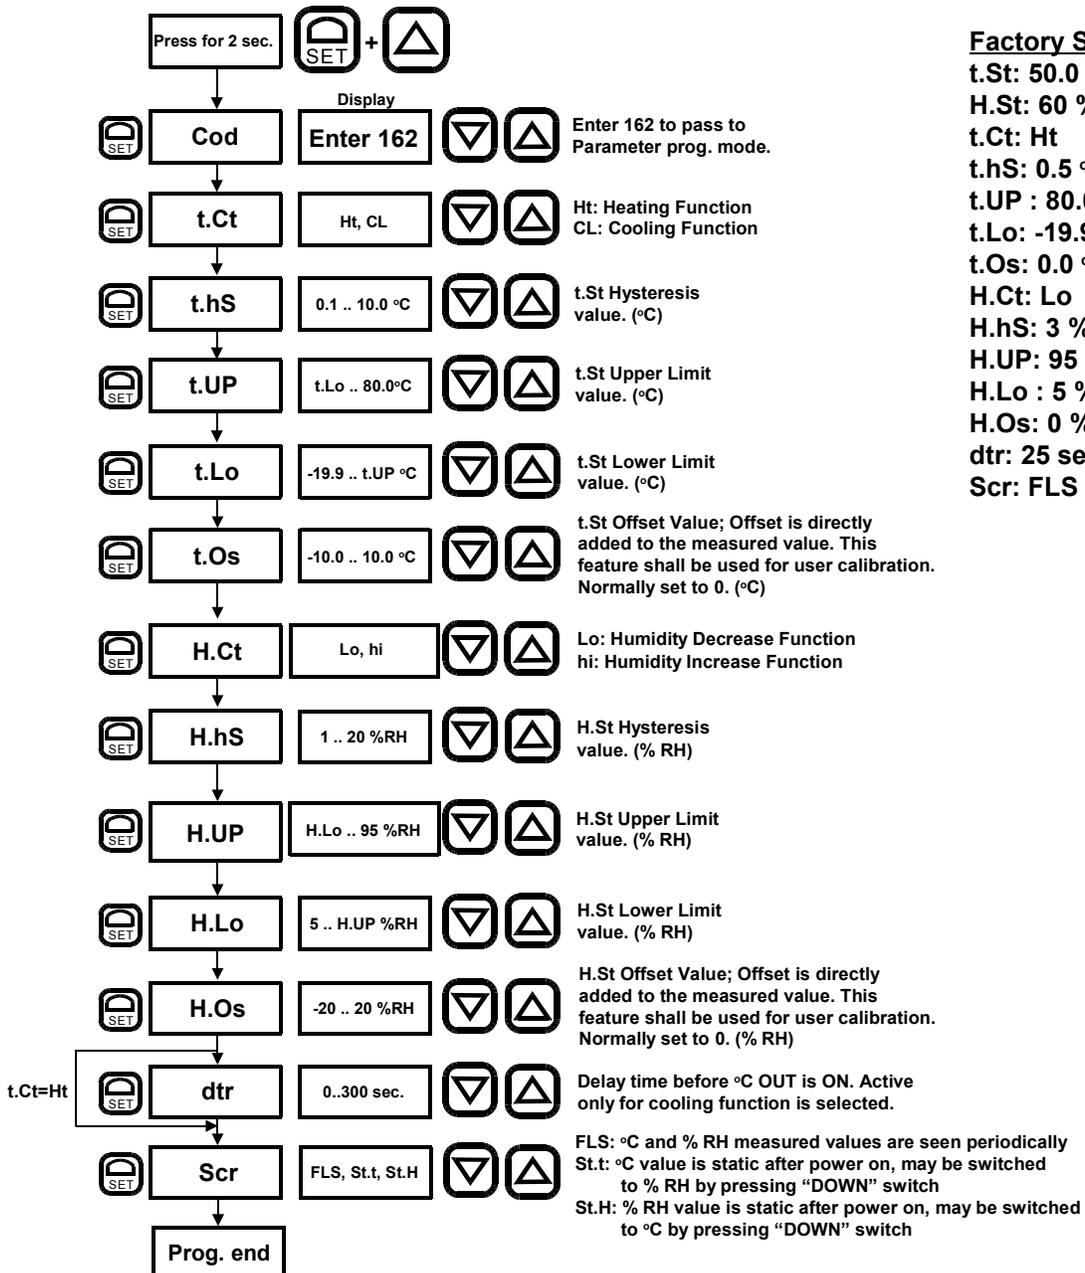

**Factory SET Values:**

- t.St: 50.0 °C
- H.St: 60 %RH
- t.Ct: Ht
- t.hS: 0.5 °C
- t.UP : 80.0 °C
- t.Lo: -19.9 °C
- t.Os: 0.0 °C
- H.Ct: Lo
- H.hS: 3 %RH
- H.UP: 95 %RH
- H.Lo : 5 %RH
- H.Os: 0 %RH
- dtr: 25 sec
- Scr: FLS

